


HOW MUCH DANCE FLOOR DO YOU NEED?*

* Assume that only one-third of your guests will dance, so the number of dancers shown in these graphs is only 33% of your total guests.

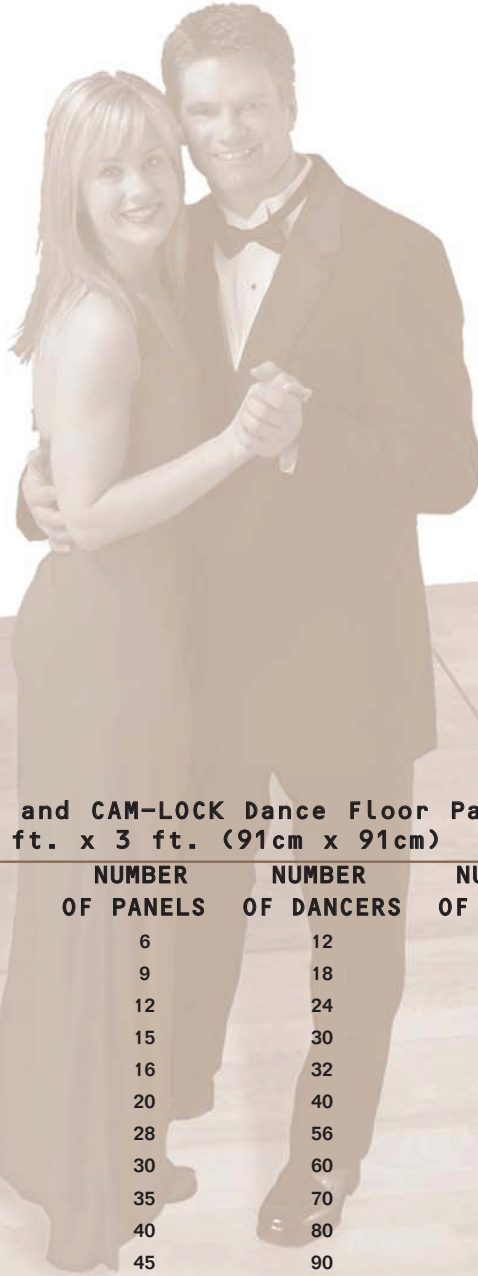

ORIGINAL and CAM-LOCK Dance Floor Panels 3 ft. x 3 ft. (91cm x 91cm)

FLOOR SIZE	NUMBER OF PANELS	NUMBER OF DANCERS	NUMBER OF CADDIES
6'x9' (183cm X 274cm)	6	12	1
9'x9' (274cm x 274cm)	9	18	1
9'x12' (274cm x 366cm)	12	24	1
9'x15' (274cm x 457cm)	15	30	1
12'x12' (366cm x 366cm)	16	32	1
12'x15' (366cm x 457cm)	20	40	1
12'x21' (366cm x 640cm)	28	56	2
15'x18' (457cm x 549cm)	30	60	2
15'x21' (457cm x 640cm)	35	70	2
15'x24' (457cm x 732cm)	40	80	2
15'x27' (457cm x 823cm)	45	90	2
18'x24' (549cm x 732cm)	48	96	2
18'x27' (549cm x 823cm)	54	108	3
18'x30' (549cm x 914cm)	60	120	3
21'x27' (640cm x 823cm)	63	126	3
21'x30' (640cm x 914cm)	70	140	3
21'x33' (640cm x 1006cm)	77	154	4
27'x27' (823cm x 823cm)	81	162	4
24'x33' (732cm x 1006cm)	88	176	4
30'x30' (914cm x 914cm)	100	200	4
30'x33' (914cm x 1006cm)	110	220	5
30'x36' (914cm x 1097cm)	120	240	5

Contact your SICO sales representative to discuss your specific dance floor needs.